

Mobility Sound

全笙科技有限公司

BH-P100

Bluetooth Speaker

Microphone

User Manual

1. Introduction to the product



PTT

Clip



Blue LED light

Red LED light



3.5mm
charging hole

Power button

2. Pairing with your Bluetooth Speaker Microphone




Press the power
button

1. Press the power button down and hold it for 5 seconds.
2. The LED blue and red light flashing alternately.
3. Release button then headset will go into pairing mode.

3. Pairing with your Bluetooth Radio

Press and hold and power on radio for 3 seconds till the LED is 2 flashes per second

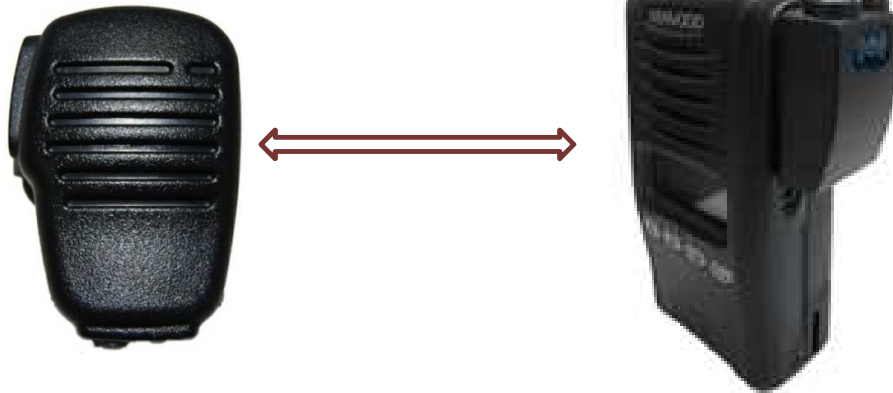

How to -		LED status
Turn on	Press Power button for approx. 2 sec. (while BH-P100 is off)	Blue LED blinking
Turn off	Press Power button for approx. 5 sec. (while BH-P100 is on)	Red LED blinking 3 times then off
Pairing Mode	Press Power button for approx. 2 sec. (while BH-P100 is off)	Red & Blue LED flashing alternately
PTT	Press PTT button while BH-P100 paired with BT Dongle	Red LED on when button pressed

MobilitySound Technology LTD.

www.mobilitysound.com

info@mobilitysound.com